
// //FLO TV Remote Control Unit | Wireless

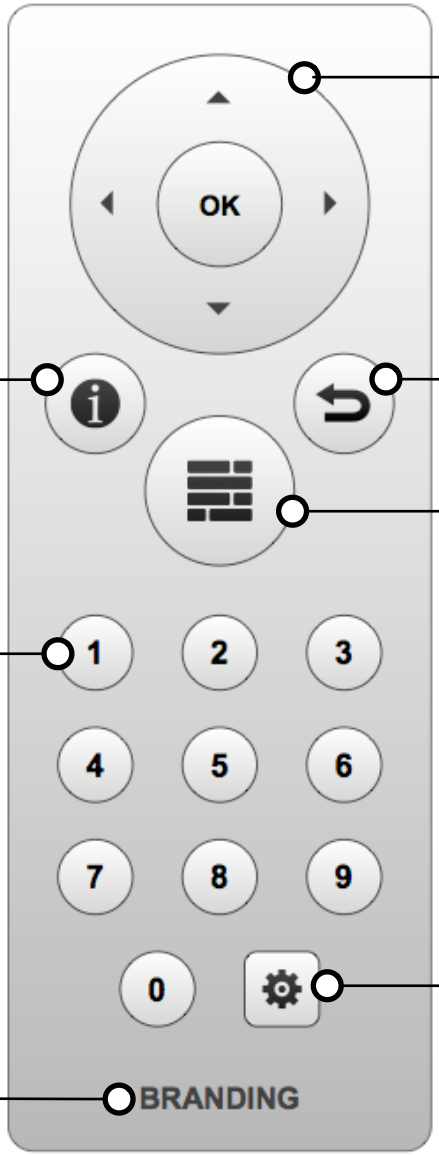

D-Pad can be used for channel change (up/down), navigating menus, and selecting items.

Info button allows the user to toggle on/off channel information and show description. First state is Channel Information, second state is Show Description, and third state is back to TV.

Back button takes the user back one screen when in the Menu, Show Information, Show Description, or Guide. Path ends at full screen TV.

Guide button allows viewer to toggle on/off the FLO TV Program Guide.

Number keys are used for invoking a favorite channel and PIN entry.

Settings button allows the viewer to toggle on/off the FLO TV settings menu.

Brandable area.

* As currently designed, the tethered RCU duplicates the wireless RCU functionality.